

Cleaning Instructions

The frequency of the steps will vary depending on the weather and the traffic volume.

If mat is recessed:


Step 1. Vacuum carpet strips daily. A broom may help to release soil from the carpet and mat prior to vacuuming. You can also vacuum, mats without carpet strips.



Step 2. Vacuum vinyl spaces between carpet strips. If this is done with a good wet/dry vacuum, a lot of the dirt trapped beneath the mat will be removed. You can also mop this area parallel to the carpet strips or top ribs.



Step 3. Periodically, release mats from mat retainers, and roll the mats onto themselves to clean the floor underneath the mat. Put mats back in the same exact place and engage mat retainers.

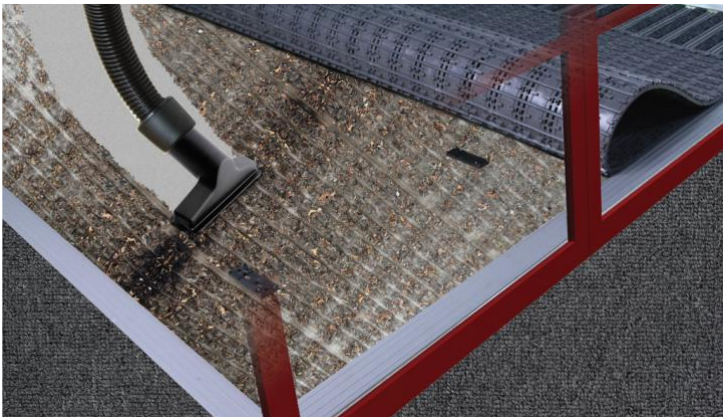

You do not have to remove aluminum frame. It stays in place.

The above steps will keep the Mat looking and functioning like new.

For very soiled mats, remove mats from frame and hose off with water. Mat must be put back in the same spot and direction. Pull one mat at a time. The carpet strips can also be cleaned by using a carpet extracting machine, running it parallel with the strips.

When in doubt on cleaning products or equipment, test a small area first before cleaning the whole system.

For Loose-Lay Mats

Follow instructions above for specific mat cleaning. For smaller mats you can move the mats out the way and clean the floor under them. For larger mats, roll half of mat back on itself and clean under the mat. Repeat with the other half of the mat.